



Operation Instructions for the SuperDeck/Choremaster

- 1.) If you are a new owner or operator of the SuperDeck, you must read the safety instructions before operating the unit.
- 2.) Operate vehicle only on a **Firm, Level** surface to load or unload.
- 3.) Plug the pendant hand control into the power pack.
- 4.) To become familiarized with the pendant hand control it is recommended that you “jog” or press the “up” or “down” button to verify the direction of travel.
- 5.) **CAUTION:** When unloading or “rolling off” make sure there is sufficient room behind the truck, and in front of the truck should the deck catch in a pothole or loose gravel and skid the truck forward.
- 6.) Always make sure the “tie down”, straps, or chains are of sufficient strength to hold the cargo.
- 7.) Always make sure the cargo is well secured before operating the SuperDeck/ChoreMaster.
- 8.) **Never under any circumstances** stand or allow anyone to stand behind the deck while “rolling off” [or between the truck and off loaded deck] .
- 9.) Do **“NOT”** allow the power cable to become “pinched, cut or broken”. Complete removal of the entire unit may become necessary for repairs.
- 10.) Disconnect and store the power cable “pendant hand control” when not operating. Store the system in deck fully on or fully off position.